
Enclosure

for BCM2835-based computer with
AbioCard




User Manual



February 2014

Bill of Materials

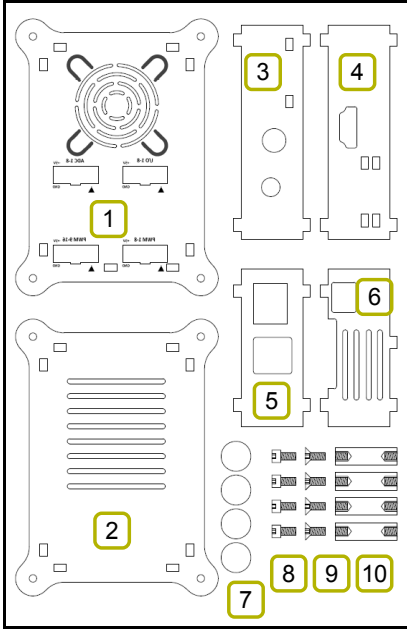

#	Description
1	Transparent acrylic top panel
2	Black acrylic bottom panel
3	Transparent acrylic side panel (audio, video)
4	Transparent acrylic side panel (HDMI)
5	Opaque acrylic side panel (LAN, USB)
6	Opaque acrylic side panel (USB Micro-B)
7	Rubber feet
8	M3 hex. screws top side
9	M3 countersunk hex. screws bottom side
10	Spacers

HINT! Did you notice the rubber band that came with the package? You can use it to hold together the assembly when you've completed step 5 of the assembly instructions. In doing so driving the screws will be much easier.

Assembly Instructions

1. Remove the protective films from the acrylic panels.
2. Mount the AbioCard on the BCM2835-based computer. You may have to leave a small gap between the card's connector and the base of the computer's GPIO pins in order to fit the card perfectly in the case.
3. Mount the side panels (3, 4, 5, 6) around the combo.
4. Place the assembly on the bottom panel (2). Make sure the air vents are closest to the LAN and USB panel (5).
5. Mount the top panel (1) on top of the assembly.
6. Insert a spacer (10) in each corner between the top panel and the bottom panel. Drive an M3 hex. screw (8) at the top and an M3 countersunk hex. screw (9) at the bottom. DO NOT exert too much force when tightening the screws!
7. Stick a rubber foot on each M3 countersunk hex. screw (9) on the bottom panel.

Contact Information

Official website: <http://www.axiris.eu/>

